

## ORDERING INFORMATION (ordering codes on page 190)

**Each Pharo Laser Scanner includes:**

- PHR 332 Laser Scanner
- CD-ROM containing configuration software in English and Italian and multi-language instruction manual complete with CE declaration of conformity

## ACCESSORIES

The following accessories are available for Pharo, to be ordered separately:

Model	Description
PHR C3L5	30-pole connector pre-wired with 13-wire cable 5 m long Built-in Configuration Memory Module
PHR CSL2	cable for serial connection between Pharo sensor and PC for configuring M8 4-pole / subD 9-pole connector, length 2 m
PHR B3	fixed attachment bracket
PHR B4	adjustable attachment bracket
PHR B5	floor mounting bracket

**WARNING!**

- For the main connection of the Pharo sensor, it is necessary to provide a 13-wire cable with 0.56 mm<sup>2</sup> cross-section. This cable is supplied with the PHR C3L5 main connector.
- To use the PHR B4 adjustable bracket it is also necessary to order the PHR B3 fixed bracket.
- To use the PHR B5 floor mounting bracket it is also necessary to order the PHR B3 fixed bracket and the PHR B4 adjustable bracket.
- AD SR0 and AD SR0A relay modules can be used for interfacing the safety output of Pharo Laser Scanner.